


7 Turn device on/off & suspend
In order to suspend the terminal, simply press the on/off button once. If you wish to store the unit for long periods of time while not in the charger, you can completely shut down the unit by pressing both the on/off button and the scan key simultaneously. Hold both keys for more than five (5) seconds while the unit powers off. The LED light will flash rapidly when the unit is powering down.



1 Take unit out of box
Remove unit from box and ensure all the parts are present and in good condition. You will need a charging cradle or in-line charger for the terminal.



2 Install Battery
Depending on the terminal configuration you have ordered, install the battery into the back of the terminal or into the bottom of the optional handle.

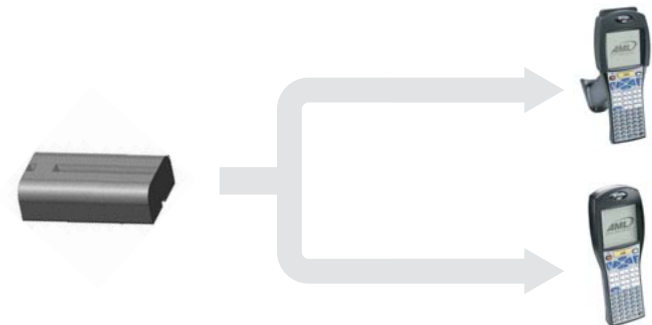

Steps 3-4

3 Charge battery/unit

Completely charge battery in terminal. The charge LED indicator will turn green on the charger when charging is complete. This will also charge the internal backup battery in the M5900 terminal.

Charging Cradle



In-line Charger



NOTE: The M5900 terminal will automatically turn on when connected to the in-line charger or placed in the charging cradle.

4 Set local date and time

You must set the local date and time whenever the M5900 terminal performs a cold boot.



Steps 5-6

5 Built-in programs

There are six (6) built-in programs that can be used on the M5900 terminal right out of the box. You can also create your own unique program(s) using either the On-Board Programmer or the M5900 Program Generator software. Please refer to the M5900 User's Guide to learn more about creating programs.



Built-In Programs

- P1 Captures Item Number
- P2 Captures Item Number, Quantity
- P3 Captures Item Number, Quantity, Location
- P4 Captures Item Number, Quantity, From Location, To Location
- P5 Captures Order Number, Item Number, Quantity
- P6 Captures P.O. Number, Item Number, Quantity

6 Upload/download data

You can upload programs or download data from the M5900 charging cradle, or terminal, using the provided USB communication cable and a standard PC. Please refer to the M5900 User's Guide to learn more about how to transfer data.

