

## The M7100 Handle

The M7100 has an optional “pistol grip” style handle for users who prefer the point and shoot style. The M7100 handle is secured to the M7100 handheld terminal by 4 screws. The battery is then relocated in the handle for easy change-out.



### **Installing the M7100 Handle**

To install the M7100 handle, remove the M7100 battery cover and store in a safe place. Remove the M7100 battery and set it aside. Remove only the 2 screws in the bottom of the battery compartment. The M7100 Handle comes with the necessary 4 screws to secure it to the M7100 unit. **Do not over-tighten the 4 screws.** Once the handle is securely fastened, insert the battery into the bottom of the handle with the contacts towards the M7100 handle. The battery is held into place by the spring latch. Install the battery handle door on the bottom of the handle. Never use the M7100 handle without the battery door in place.